

Sunbeam

Quantum Evo Stainless

1.7 litre cordless kettle with
hinged locking lid

Instruction Booklet

KE6300

Please read these instructions carefully
and retain for future reference.





Quantum Toasters

Instruction Booklet

This book covers the use and care of the following Sunbeam Toasters:

- TA3220 Quantum 2 – 2 Slice Chrome cool-touch toaster
- TA3220B Quantum 2 – 2 Slice brushed stainless cool-touch toaster
- TA3420 Quantum 4 – 4 Slice Chrome cool-touch toaster
- TA3420B Quantum 4 – 4 Slice brushed stainless cool-touch toaster

Please read these instructions carefully
and retain for future reference.



Contents

Sunbeam's Safety Precautions	1
Features of your Quantum Toaster	2
Using your Quantum Toaster	4
Toaster functions	5
Care and cleaning	6

Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώστε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

- 上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น

เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR SUNBEAM TOASTER.

- Do not place any objects such as toast, bread or similar on top of your toaster when in use.
- Operate the toaster on a flat level surface.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- Do not leave your toaster unattended when in use.
- Clean crumb tray regularly.
- Do not allow crumbs to accumulate in the crumb tray.
- Do not toast stale bread, rice crackers or similar on a high setting as they may catch fire.
- **WARNING:** Never attempt to extract jammed toast, crumpets or muffins with a knife or any metal object, as contact with the live element may cause electrocution.

Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- Close supervision is necessary when your appliance is being used by children or infirm persons.
- Young children should be supervised to ensure that they do not play with the appliance.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line. Ensure the above safety precautions are understood.

Features of your Quantum Toaster

Extra wide bread slots

Enables you to toast a large variety of breads both thick and thin, bagels, crumpets and muffins.

Self-centring bread slots

Whether you are toasting thick or thin bread, your bread will always be held in the centre of the slot to ensure even toasting.

Cool touch exterior

 
Remains cool to touch preventing burns and plastic wrappers clinging to the side of your toaster.

Removable crumb tray

Pulls out from underneath your toaster for easy removal of crumbs.

Cord storage

The cord can be wrapped underneath for safe and convenient storage.

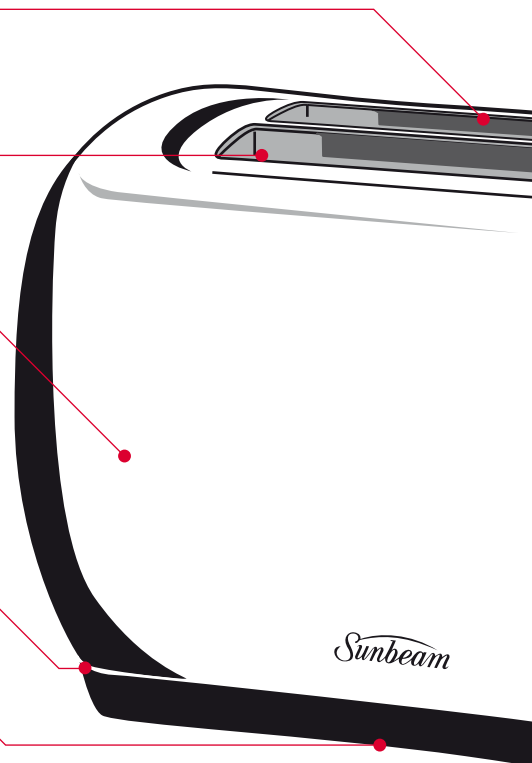



High-lift and toasting lever

Raises the toast above the starting position so you can remove the toast from the toaster without burning your fingers. Ideal for crumpets and muffins.

Cancel button

Immediately interrupts any toasting cycle and pops the toast up.

Electronic browning control

Variable toast settings from 1 - 6, toasts the bread to your desired colour everytime.

Quantum 4 Slice Toaster - TA3420 & TA3420B

Using your Quantum toaster

Plug the toaster into a 230-240 volt AC power outlet and switch the power on.

Toasting Bread

1. Position the bread into the bread slot.
2. Select the desired colour setting using the Electronic Browning Control.

Important: Do not toast stale bread, rice crackers or similar on a high setting as they may catch fire.

3. Push the Toasting Lever down to commence the toasting cycle.

4. When the desired browning is achieved, the toaster will automatically turn off and pop the toast up. If you need to remove the toast before the cycle is complete, then press the Cancel button. The Cancel button will immediately interrupt the toasting cycle and pop the toast up.
5. To remove small pieces of toast or bagels, use the High-lift Lever to lift the toast above the starting position. This will prevent burning your fingers as you remove the toast.

Toaster functions

Cancel button

The Cancel button immediately stops any of the toasting cycles. As a consequence of this, the toast will pop up.

High-lift lever

When toasting small pieces of bread, crumpets or muffins we recommend using the High-lift Lever to prevent you from burning your fingers.

Toasting frozen bread

Turn the Electronic Browning control dial to the Frozen setting. This function will toast your frozen bread. The colour of your toast on the Frozen setting will brown to setting 3 or 4.

Reheat feature

Turn the Electronic Browning control dial to the 'MIN' setting. This feature allows toast to be reheated once already toasted.

Toasting one or two pieces of bread in your Quantum 4 Slice Toaster

Position the bread in the middle of the bread slot. When toasting two pieces, position one piece in the centre of each bread slot.

If your bread jams in the toaster, switch power off, remove the plug from the power outlet and ease the bread out of the toaster

Toasting in your toaster

If your bread jams in the toaster, switch power off, remove the plug from the power outlet and ease the bread out of the toaster. Ensure muffins or bagels are cut into even halves and fit freely into the bread slot. Do not force them into the toaster.

WARNING: Never attempt to extract jammed toast, muffins, bagels or crumpets with a knife or any other metal object, as contact with the live element may cause electrocution.

Care and cleaning

Always turn the power OFF and remove the plug from the power outlet after use and before cleaning your toaster.

To clean the exterior.

Wipe exterior with a slightly dampened cloth and polish with a soft dry cloth.

Do not use metal scourers or abrasives as this may scratch the exterior surface.

Removable Crumb Tray.

To remove the crumbs, simply slide out the tray, empty and place it back in the toaster.

Important: Clean the crumb tray regularly.

Do not allow crumbs to accumulate, as they may cause a potential fire hazard.

To clean the toaster interior.

Clean inside the toaster regularly. To do this, unplug the appliance, turn it upside down over the sink and gently shake all the crumbs out.

Notes

Notes

12 Month Replacement Guarantee

We are so confident of the quality of our product, should this appliance develop any malfunction within 12 months of purchase (3 months commercial use) due to faulty materials or manufacture, we will replace it for you absolutely free.

Should you experience any difficulties with your appliance, please phone our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Alternatively, simply return the faulty appliance to your place of purchase, along with your purchase receipt.

Your Sunbeam 12 Month Replacement Guarantee naturally does not cover misuse or negligent handling, and excludes breakables such as glass or ceramic items, and normal wear and tear.

Similarly, your 12 Month Replacement Guarantee does not cover damage to household surfaces as a result of water or other substances leaking from your appliance, nor does it cover freight costs.

In Australia, this guarantee is additional to the conditions and guarantees which are mandatory as implied under the Trade Practices Act 1974 and State and Territory legislation.

Sunbeam Service Centres

Sunbeam has established a network of authorised service centres throughout Australia and New Zealand to provide quick, convenient service for our customers.

Should your appliance require repair or service, either during or after the guarantee period, contact your nearest service centre.

For a complete list of Sunbeam's authorised service centres:

Australia

www.sunbeam.com.au/service-centres
1300 881 861

New Zealand

www.sunbeam.co.nz/service-centres
0800 786 232

Consumer Hotline

In Australia

Visit www.sunbeam.com.au

Or call 1300 881 861

In New Zealand

Visit www.sunbeam.co.nz

Or call 0800 786 232

 is a registered Trademark of Sunbeam.

'Quantum' is a trademark of Sunbeam Corporation.

Made in China.

Due to minor changes in design or otherwise,
the product may differ from the one shown in this leaflet.

© Copyright. Sunbeam Corporation Limited 2008.

ABN 45 000 006 771

Sunbeam Corporation is a division of GUD Holdings Ltd.

Contents

Sunbeam's Safety Precautions	1
Features of your Quantum Evo Stainless	2
Using your Quantum Evo Stainless	4
Sunbeam's 3-Way Safety System	5
Care and Cleaning	6

Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاط‌های بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR SUNBEAM KETTLE.

- Boiling water will scald. Do not leave a boiling or hot kettle near or where children may touch it.
- Boiling water may be ejected, if overfilled.
- Do not leave the power cord near the edge of a bench top where children may touch or pull it.
- Do not move kettle while switched on.
- Always turn the power off and unplug the cord while the kettle is NOT in use.
- Do not operate the kettle without water.
- Your Quantum Evo Stainless kettle must only be used with the power base supplied.
- Always operate the kettle on a flat, level surface.

Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible adult to ensure that they can use the appliance safely.
- Young children should be supervised to ensure that they do not play with the appliance.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

Features of your Quantum Evo Stainless

Two water level gauges

The full length water gauge indicates the volume of water in the kettle up to 1.7 litres. The two gauges make the kettle convenient to use for both left and right handed users.

Stylish stainless steel design

 
Long life stainless steel to suit any kitchen décor.

 
2400 watt concealed element

The fast boil 2400 watt element is concealed in the base of the kettle for longer element life. The smooth stainless floor reduces scale build up and allows for easy cleaning.

Removable mesh filter

Keeps the water clean of any foreign matter and is removable for easy cleaning.

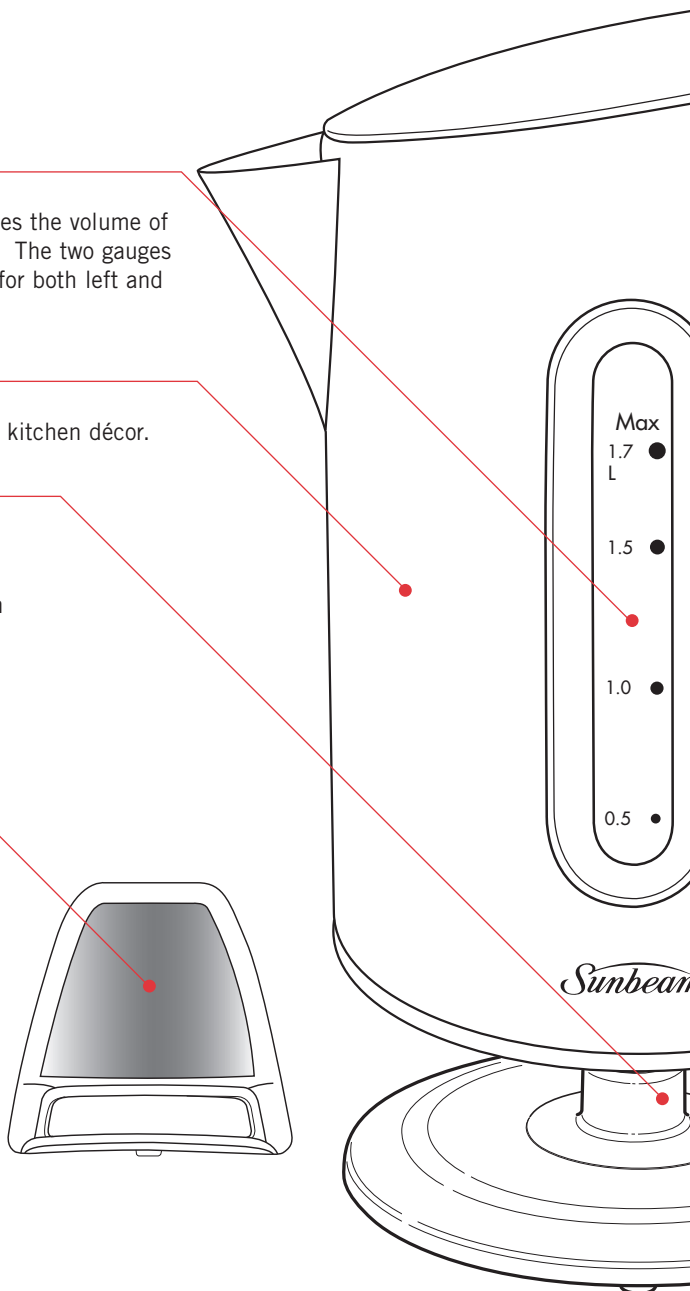

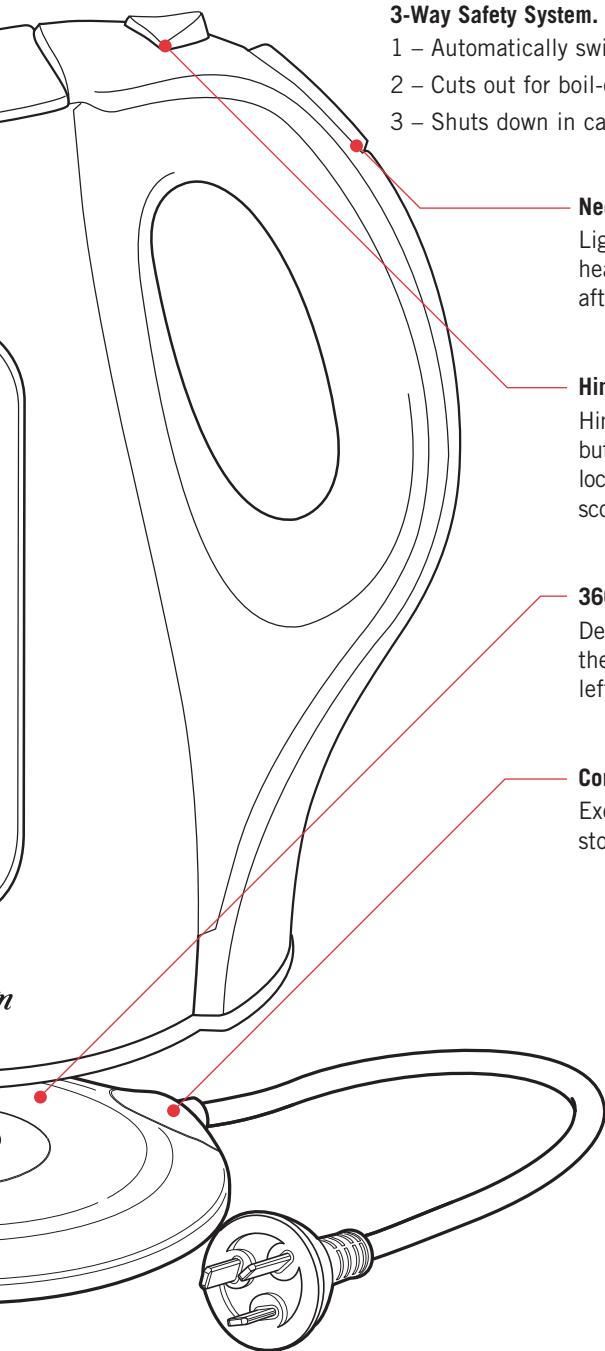

3-Way Safety System.

- 1 – Automatically switches the kettle off after boiling.
- 2 – Cuts out for boil-dry production.
- 3 – Shuts down in case of overheating.



Neon ON/OFF switch with auto cut-out

Lights up to indicate that the kettle is on and heating. Switches the kettle off automatically after boiling.

Hinged lid with safety lock

Hinged locking lid opens at the push of a button for one-handed use and for safety, locks shut to reduce the chance of accidental scolding.

360 degree cordless power base

Designed to allow you to place the kettle on the base in any direction. Convenient for both left and right handed users.

Cord storage facility

Excess cord can be wound around the cord storage facility underneath the power base.

Using your Quantum Evo Stainless

Before using your kettle.

It is recommended that you clean your kettle before use by filling the kettle with water, up to the maximum level indicator, boil and discard.

Using your kettle.

1. To fill the kettle, remove it from the power base and lift the lid, by pressing the button on the handle. Alternatively, the kettle may be filled through the pouring spout.

2. Fill the kettle with the desired amount of water. Always fill the kettle between the minimum and maximum marks. Too little water will result in the kettle switching off before the water has boiled.

NOTE: Do not fill the kettle over the maximum level, as water may spill out of the spout when boiling.

3. Push the lid closed firmly until it locks into position.

4. Place the kettle on the power base and connect the plug into a 230/240 Volt AC power outlet. Turn the power ON.

5. Press the ON/OFF button downwards at the top of the handgrip. The power indicator light will illuminate to indicate the kettle is heating. The kettle will switch off automatically once the water has boiled.

NOTE: Ensure that the ON/OFF switch is clear of obstructions and the lid is firmly closed. The kettle will not turn off if the ON/OFF switch is constrained or if the lid is left open. Do not remove the kettle from the power base while in use.

6. Lift the kettle from the power base and pour the water.

NOTE: Use caution when pouring the water from your kettle, as boiling water will scald.

 
7. The kettle may be stored on the power base while not in use. The kettle will not re-boil until the ON/OFF switch is pressed downward.

NOTE: Ensure the power is turned off at the power outlet when the kettle is not in use.

Should you accidentally allow the kettle to operate without water, boil-dry protection will automatically switch it off. If this occurs, allow the kettle to cool before filling with cold water and re-boiling.

Cord Storage Facility.

Excess cord can be stored by winding the cord around the storage facility underneath the power base.

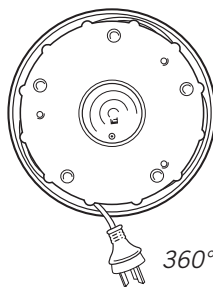

360° power base

Sunbeam's 3-Way Safety System



Safety is a major consideration in the design of a Sunbeam kettle. This is why we have developed our 3-Way Safety System, which ensures that your kettle will:

1. Automatically switch off after boiling.

For convenience, safety and energy efficiency, your Sunbeam kettle will automatically switch off after boiling.

2. Cut-out for boil-dry protection.

If the kettle is operated without water, it will automatically cut-out, preventing any damage to the element.

If this occurs, allow the kettle to cool before filling with cold water and re-boiling.

3. Shut-down in case of overheating.

In the event of overheating, the kettle will automatically shut down to prevent further damage. Should this occur, take your kettle to a Sunbeam Service Centre or Appointed Service Agent.

Care and Cleaning

Always disconnect the kettle from the power outlet before cleaning.

Never immerse the kettle switch area, cord or power base in water, or allow moisture to come into contact with these parts.

Removal of mineral deposits.

Mineral deposits in tap water may cause the interior of the water gauge to discolour. To remove this build-up, use Sunbeam Liquid Descaler, a simple to use, non-toxic cleaner available from Sunbeam Appointed Service Agents.

Alternatively:

1. Fill the kettle with 3 cups of white vinegar and the remainder with water and allow to stand overnight. **DO NOT BOIL.**
2. Empty the solution from the kettle. Any stains remaining inside the spout can be removed by rubbing with a damp cloth. Fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle will then be ready to use.

To clean the stainless exterior

The stainless steel surface may be wiped over with a damp cloth and polished with a soft dry cloth.

CAUTION: Do not use chemicals, steelwool, or abrasive cleaners to clean the outside of the kettle, as these will scratch the stainless steel surface.

To clean the mesh filter

Press the button on the handle to open the hinged lid. Grasp the top of the mesh filter and pull upwards to remove. Wash in warm soapy water and dry thoroughly before replacing in the kettle.

Cleaning the concealed heating element

This kettle features a non-corrosive stainless steel heating element. Over time, scale may build up on the concealed element inside the kettle, causing discolouration that may have the appearance of rust. Be assured this is not rust. If this occurs clean with a green Scotchbrite® scourer or similar and a suitable abrasive cleaning cream. Rinse and clean thoroughly with tap water before using your kettle again.

'Sunbeam', & 'Quantum' are registered trademarks of Sunbeam Corporation.

Made in China. Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet. Backed by Sunbeam's 12 Month Replacement Guarantee and National Service Network.

© Copyright. SUNBEAM CORPORATION LIMITED 2006.

(INCORPORATED IN N.S.W.) A.C.N. 000 006 771

Sunbeam Corporation is a division of GUD Holdings Ltd.

For more information or advice on this or any other Sunbeam appliance, visit **www.sunbeam.com.au** or contact the Sunbeam Consumer Service Line.

Australia 1800 025 059

New Zealand 0800 786 232.



Consumer Hotline

Australia

1800 025 059

New Zealand

0800 786 232

www.sunbeam.com.au



is a registered Trademark of Sunbeam
Corporation Limited. ACN 000 006 771.

© Sunbeam Corporation Limited 2006.